




Rotary Folding Hoist Handle and Grip Instructions

IMPORTANT: Read these instructions before assembly and use.

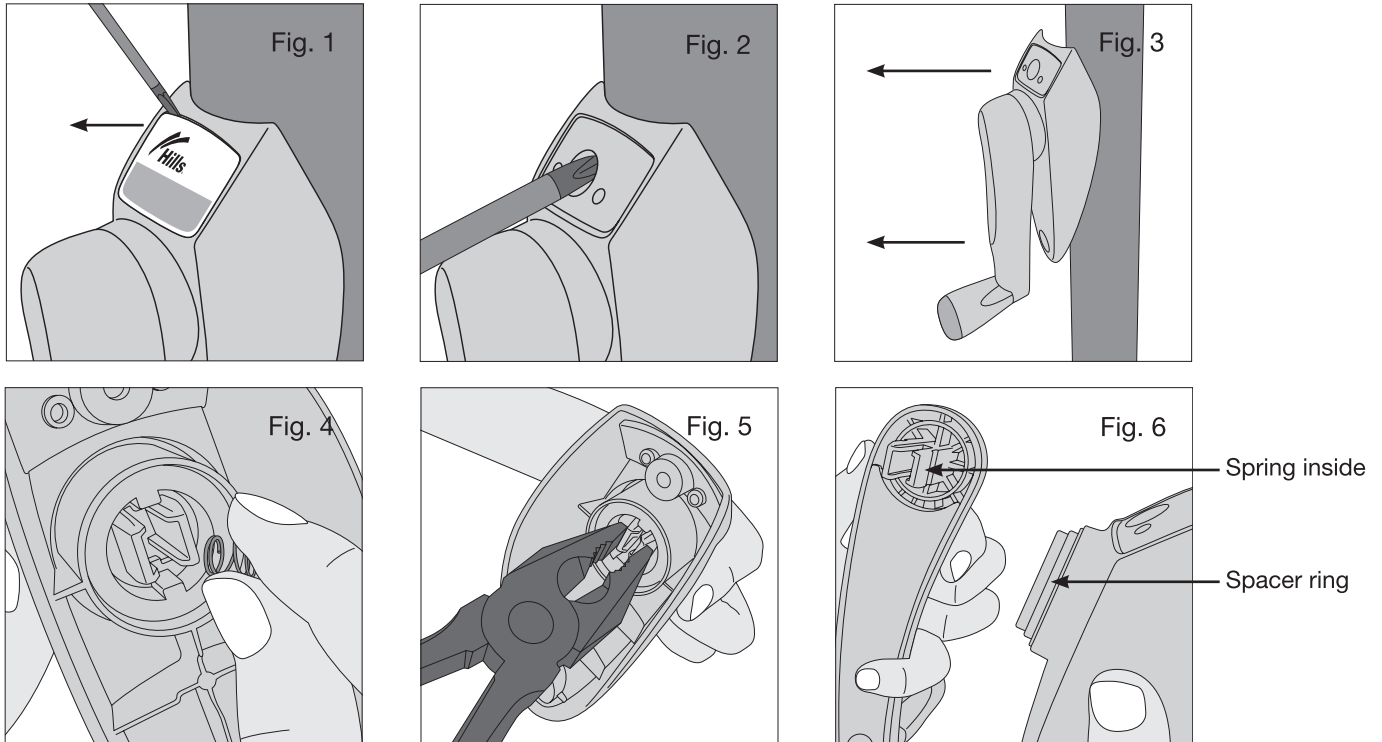

Important: Protect your eyes when removing and replacing plastic components.

To remove:

1. Wind down the Hoist to its minimum height
2. Fold up the Hoist. Wrap the line retaining strap around the hoist to prevent lines from becoming tangled.
3. With a screwdriver gently pry off the badge cover and bottom screw cover from handle shroud (Fig. 1). Place parts to one side.
4. Undo the handle screws and remove handle from Hoist (Fig. 2-3). Keep the screws for re-use.
5. Remove spring from recess between handle back tabs (Fig. 4).
6. Using pliers to pinch the handle tabs remove from shroud (Fig. 5). Discard old handle assembly.

To replace:

1. Push the new handle into the shroud. Ensure handle is locked in position with the spacing ring and handle spring in place (Fig. 6).
2. Fit the handle assembly back onto to the Hoist with the screws removed previously.
3. Refit badge cover and bottom handle shroud screw cover plug.

Handle grip pack contains:

DESCRIPTION	QTY
Handle and grip assembly	1
Handle shroud plug	1